 


### TRANSDUCER HOLE PLUG

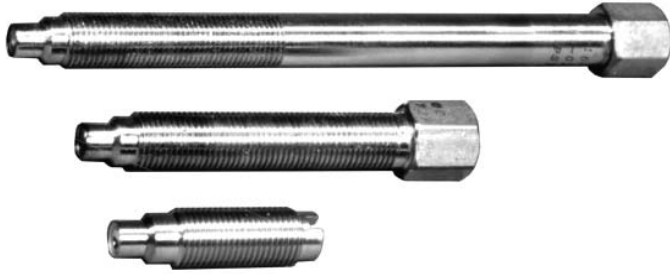 


PART#	DESC
MP-PLUG-2	1.82" L SLOT
MP-PLUG-3	3" + Hex
MP-PLUG-6	6" + Hex

### TRANSDUCER - Tip Spacer



PART#	DESC
MP-SPACER-025	0.025" Spacer
MP-SPACER-032	0.032" Spacer
MP-SPACER-045	0.045" Spacer
MP-SPACER-063	0.063" Spacer
MP-SPACER-090	0.090" Spacer

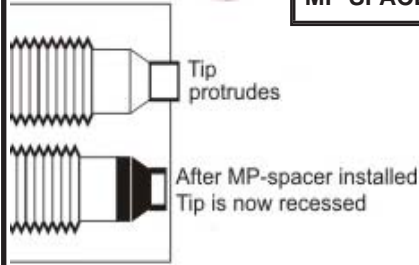


### HOLE CLEANING KIT




PART#	DESC
MP-CLEAN-1/2	1/2"-20UNF
MP-CLEAN-5/8	5/8"-11NC
MP-CLEAN-3/4	3/4"-16NC
MP-CLEAN-M18	M18x1.5
 
### HOLE DRILL KIT

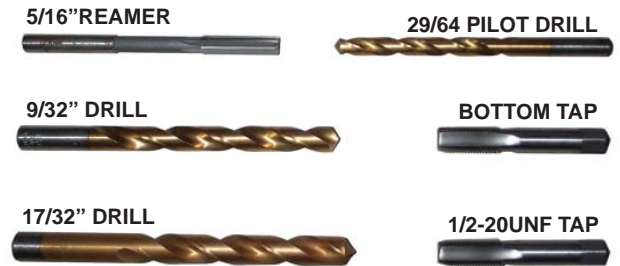

PART#	DESC
MP-CUT-1/2	1/2"-20UNF
MP-CUT-5/8	5/8"-11NC
MP-CUT-3/4	3/4"-16NC
MP-CUT-M18	M18x1.5

### M18 to 1/2-20UNF ADAPTOR

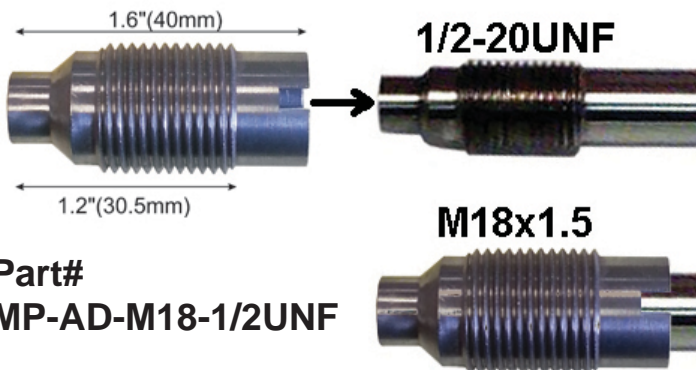 

### MOUNTING BRACKET

